




BM-VR 01

Before inserting the screws, check and possibly enlarge the holes in the seats!


Prima di inserire le viti controllare ed eventualmente allargare i fori delle sedi!

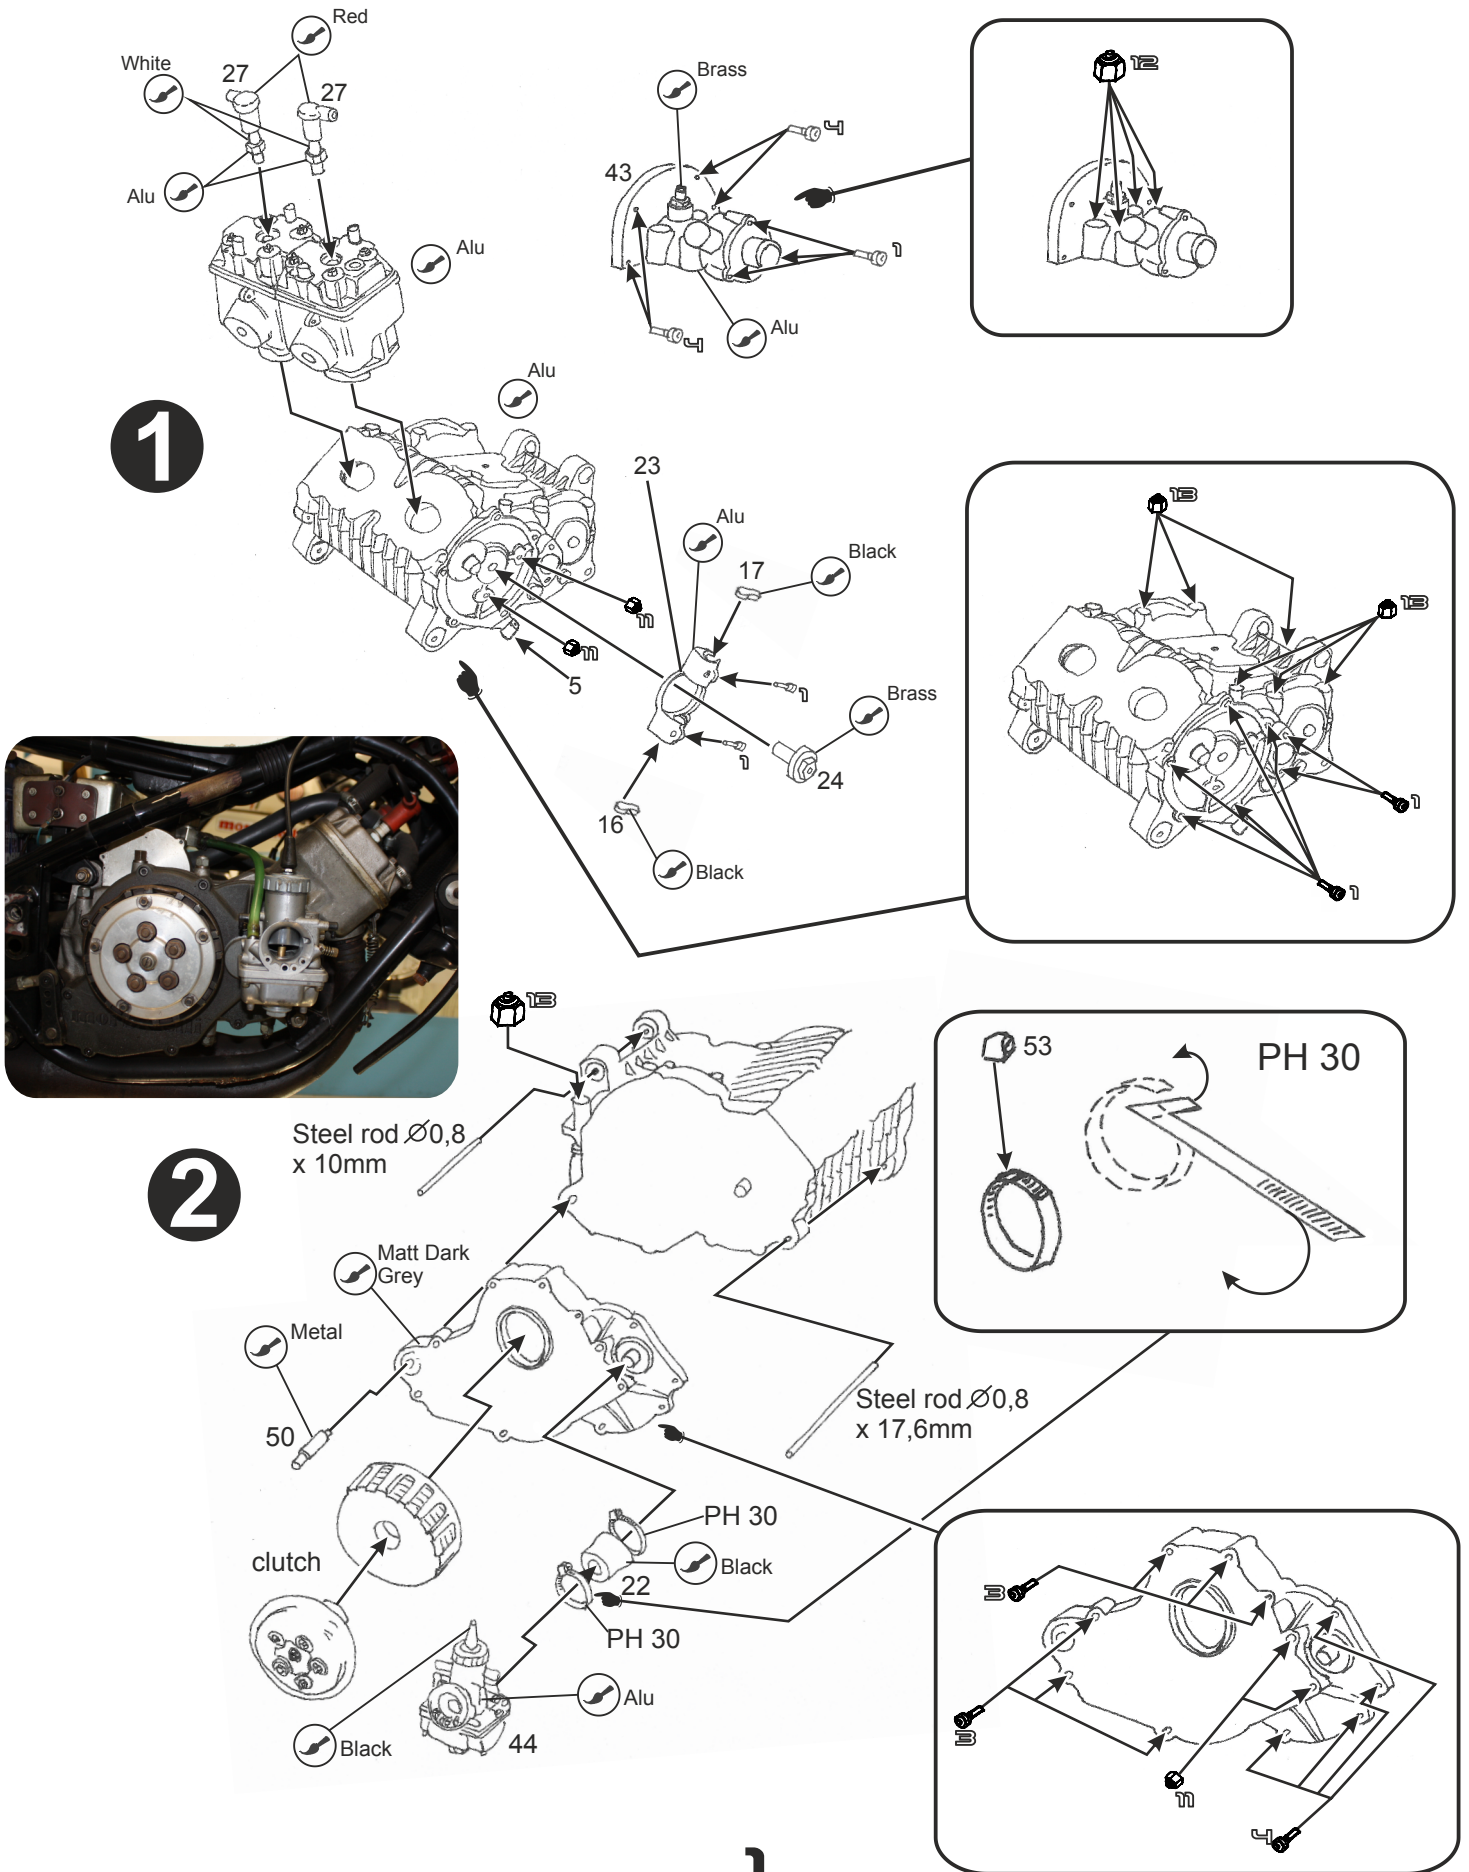

3

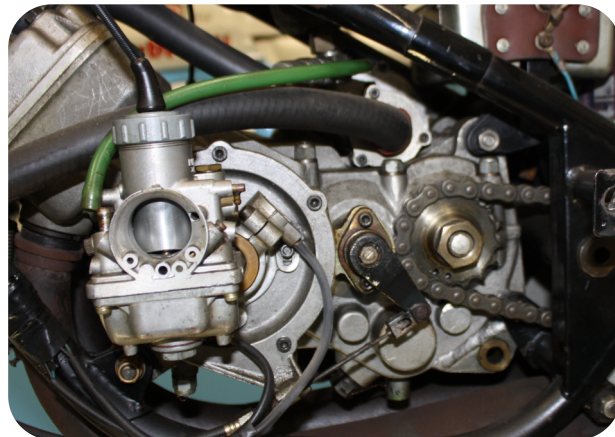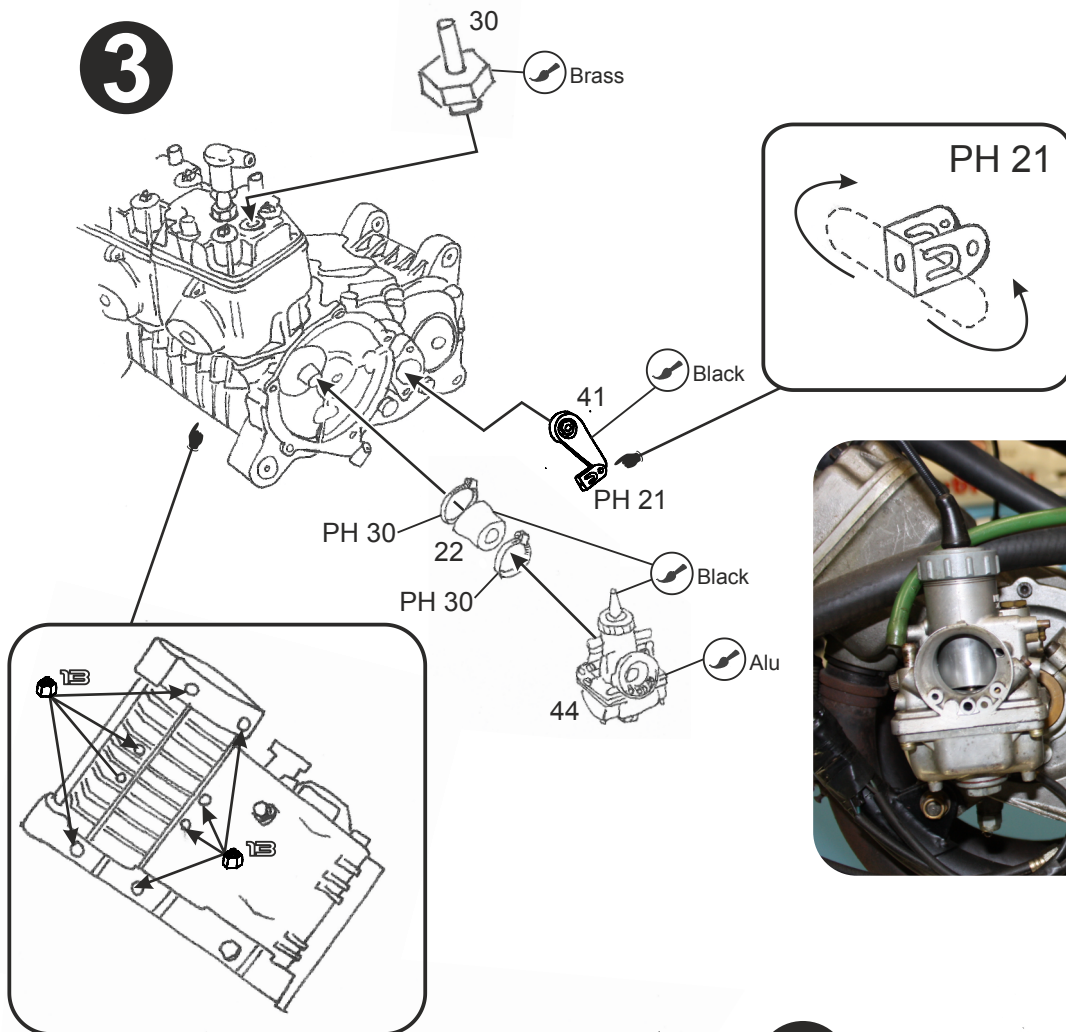

4

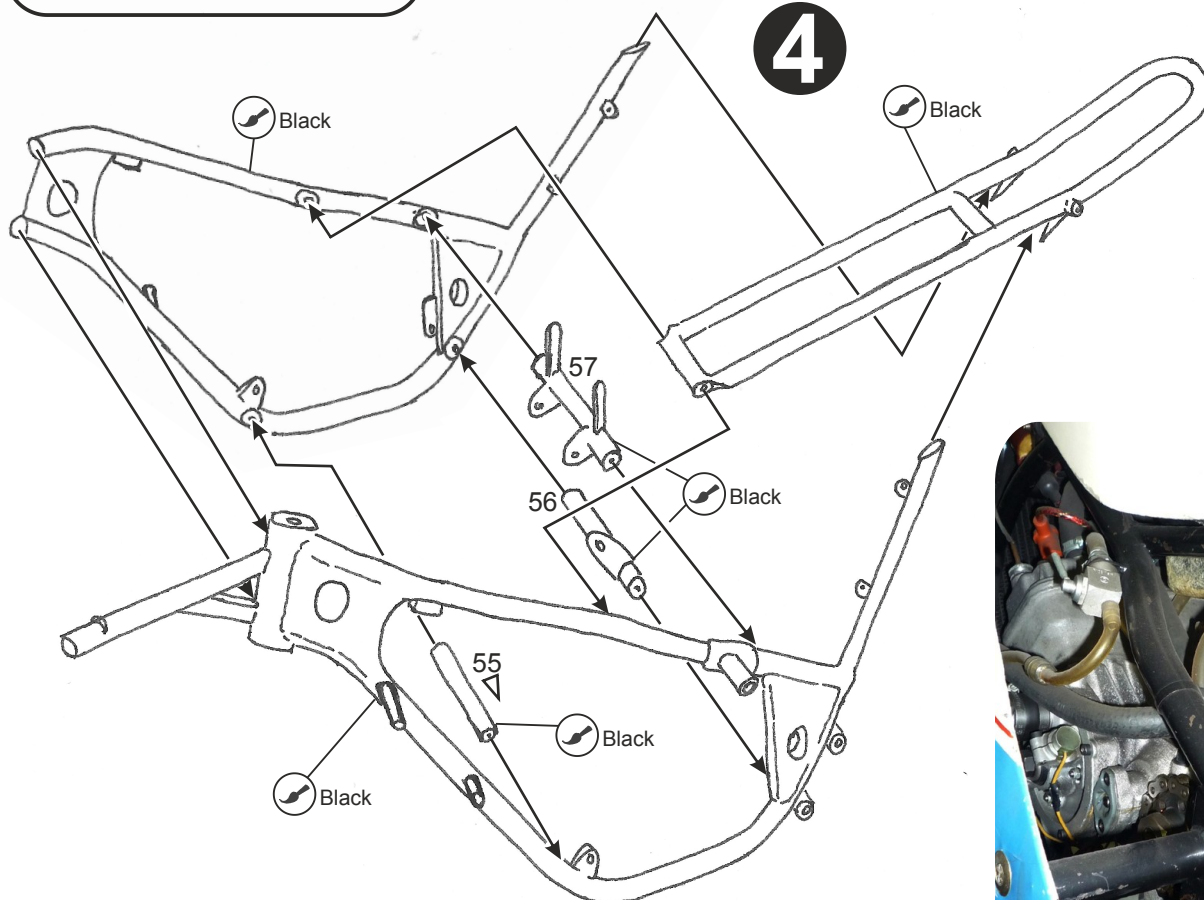


5

PH 15

13

PH 16

Dx & Sx

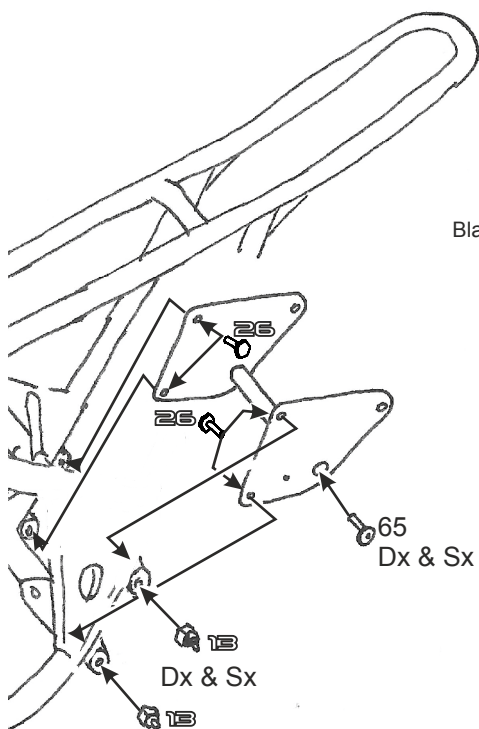

PH 3

PH 3b

Black

Copper tube
Ø1 x 15mm

PH 4b

PH 4

Steel pins Ø0,6mm
cut length 8mm

52

Alu

35

70

Black

34

69

Grey


36

2


12

6


Sx

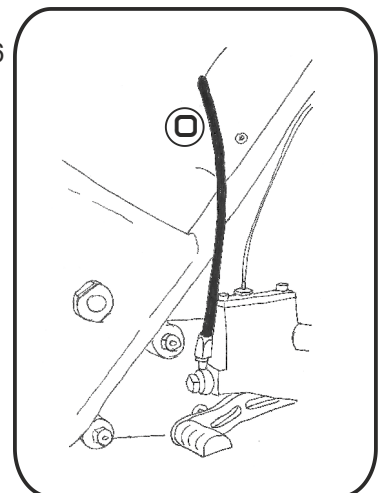


7

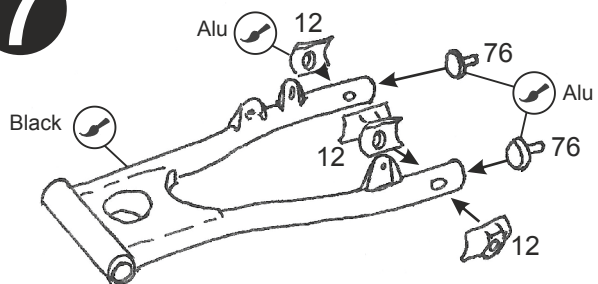



8

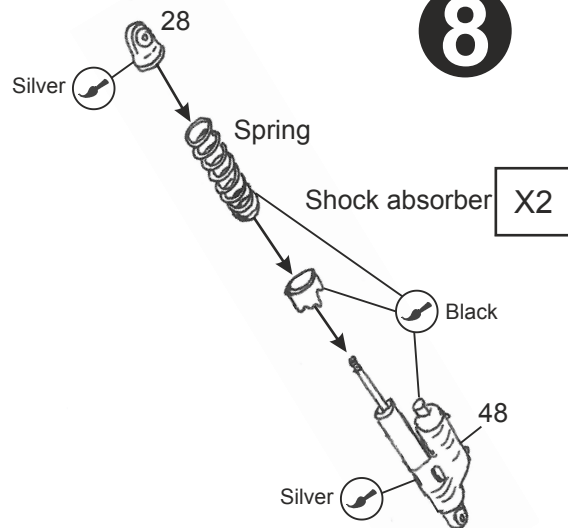


9

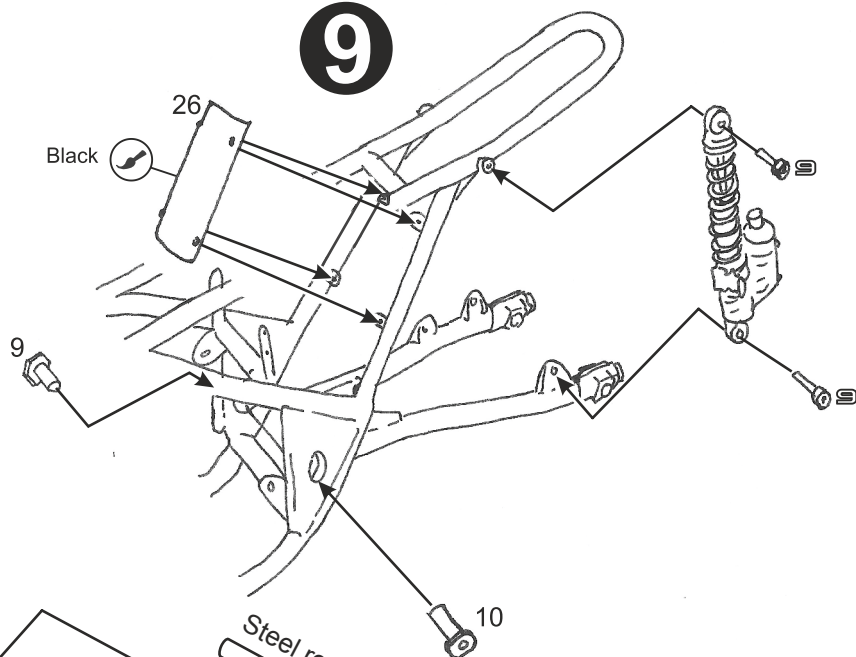




10

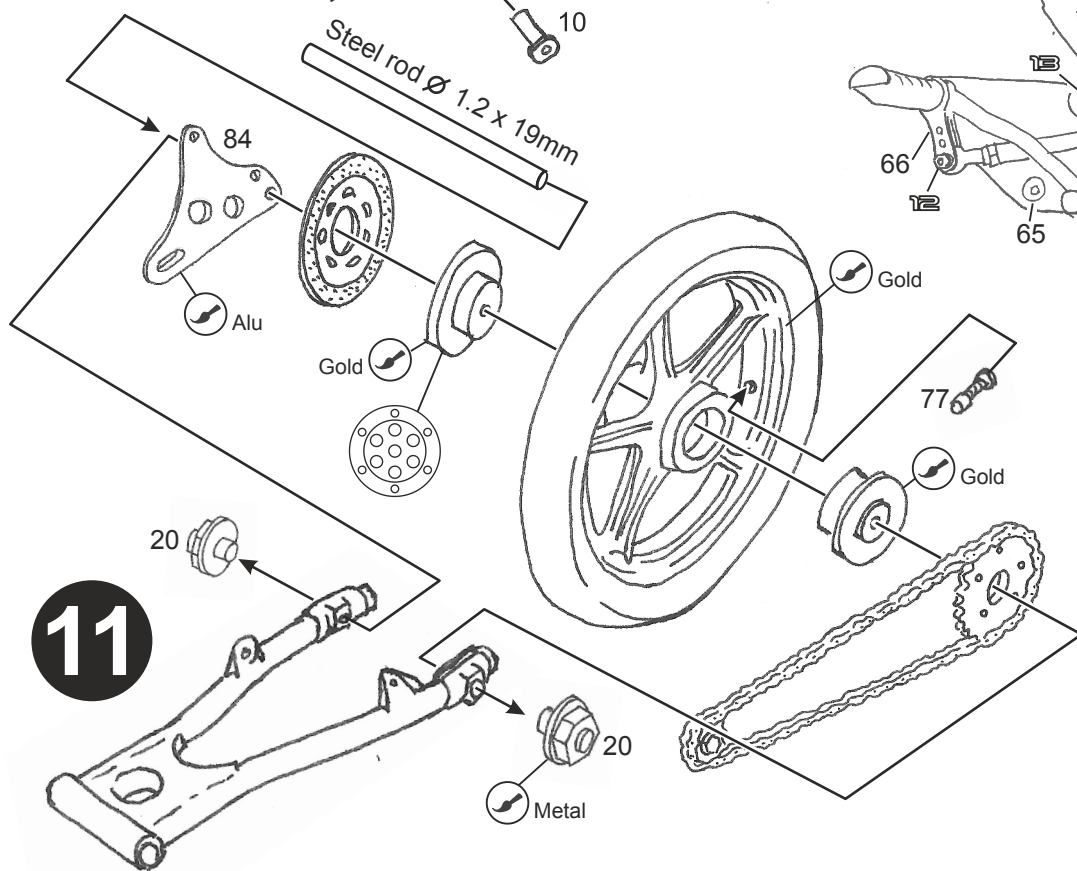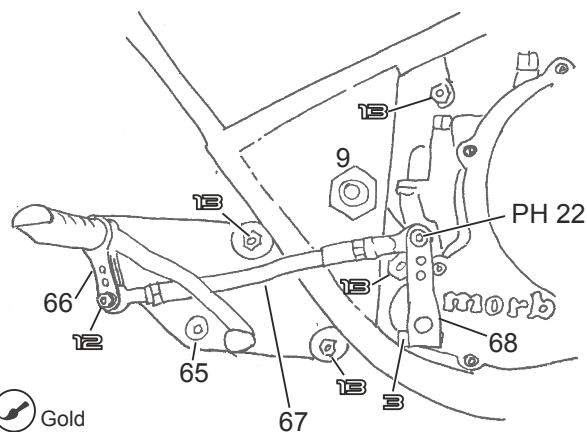



11

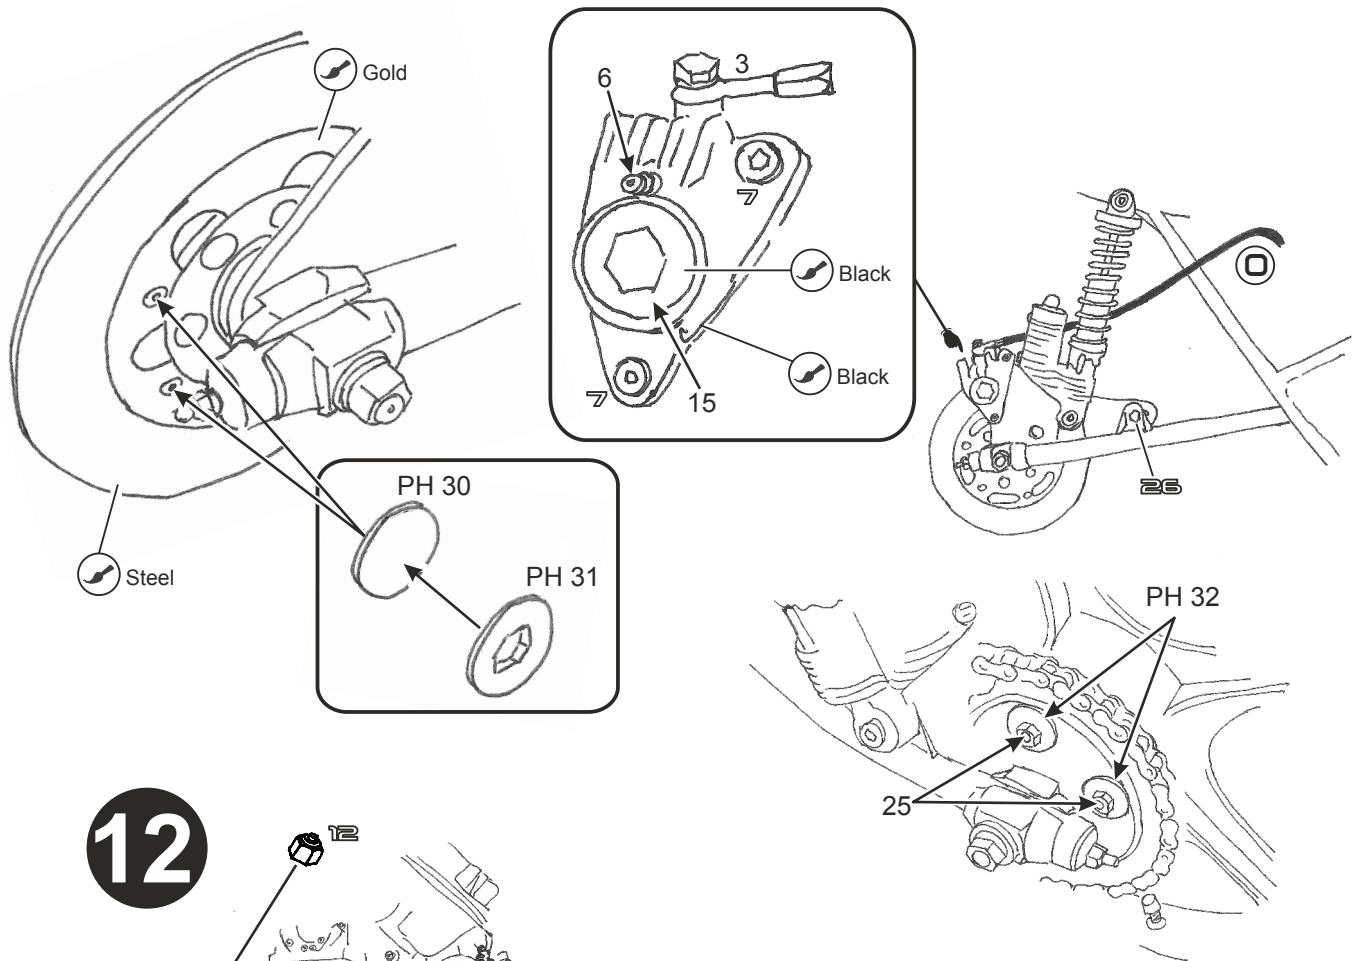


12

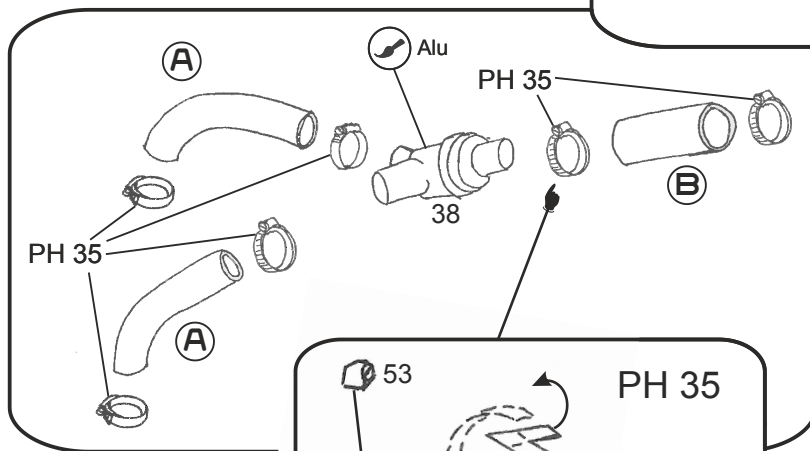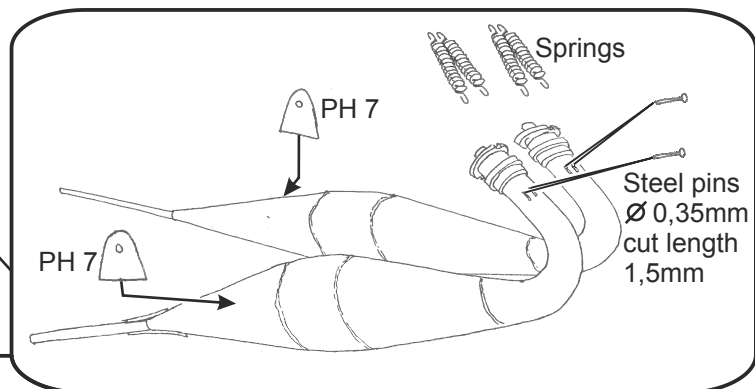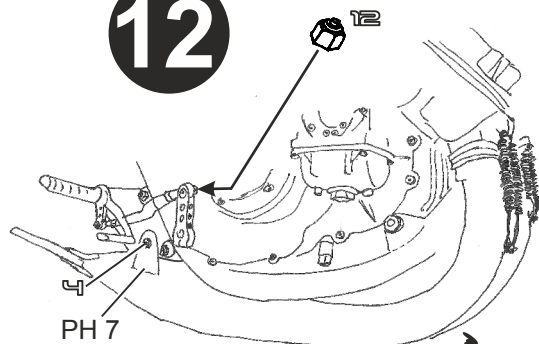

13

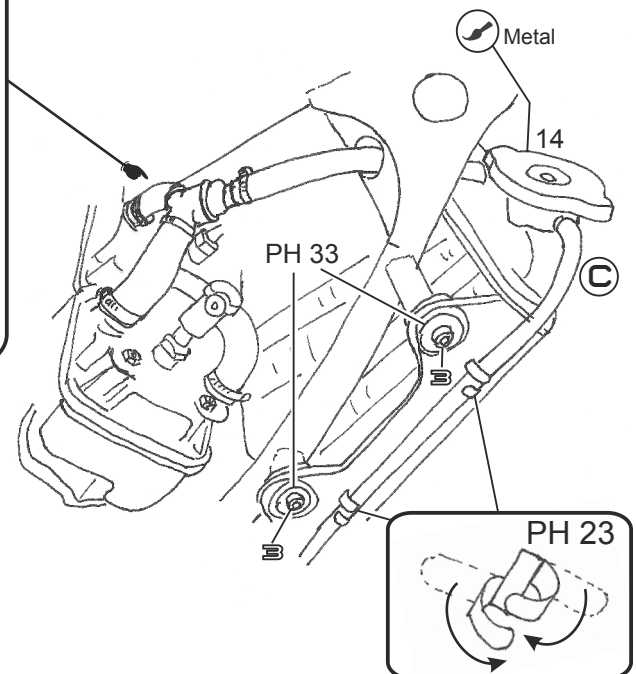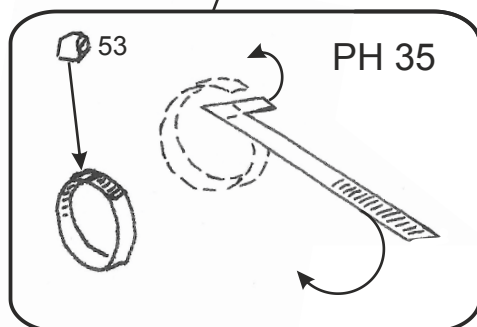

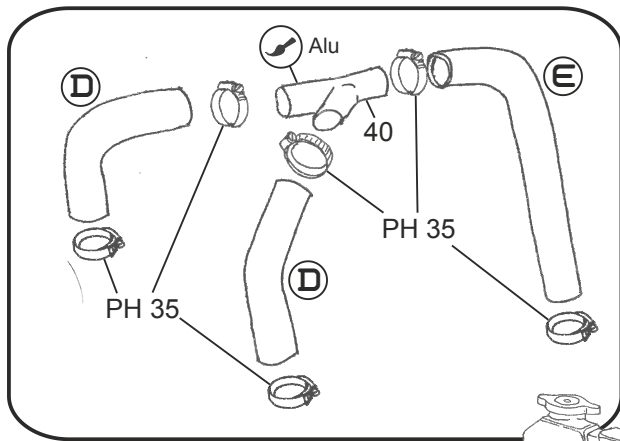

14

Black

PH 33

PH 35

F

15

DX & Sx

Alu

18

39

G

16

Orange

19

Alu

32


42



Red


Dark grey

Black




7

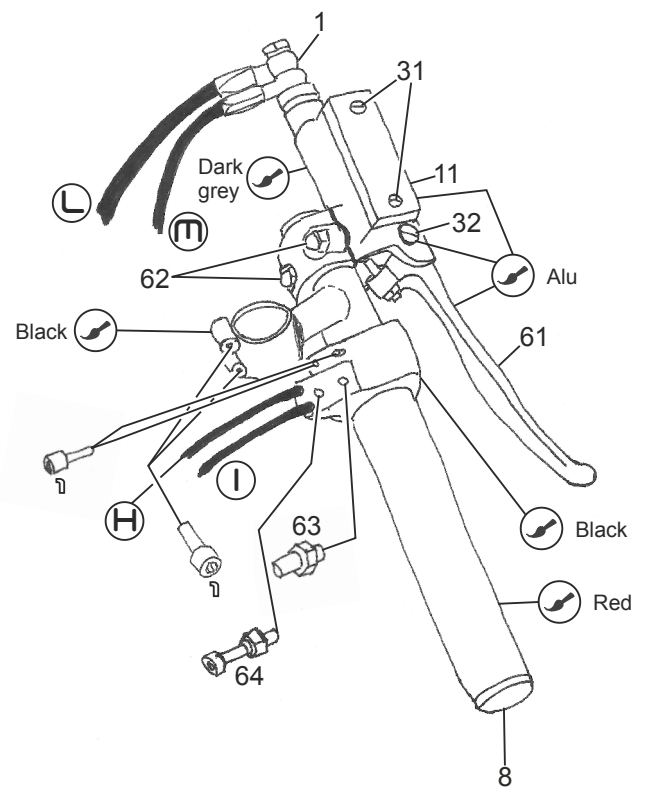

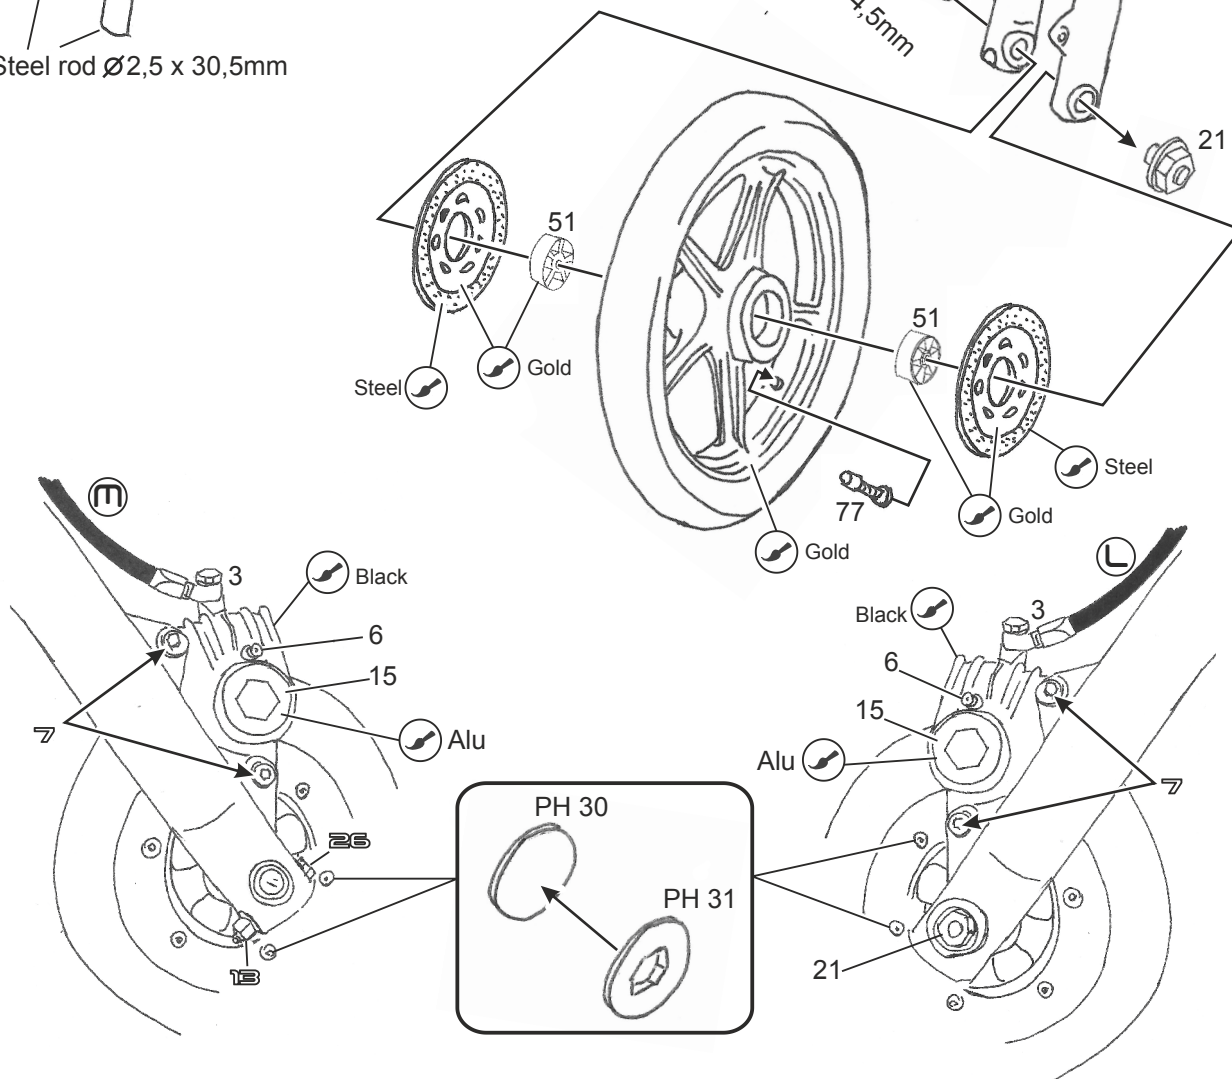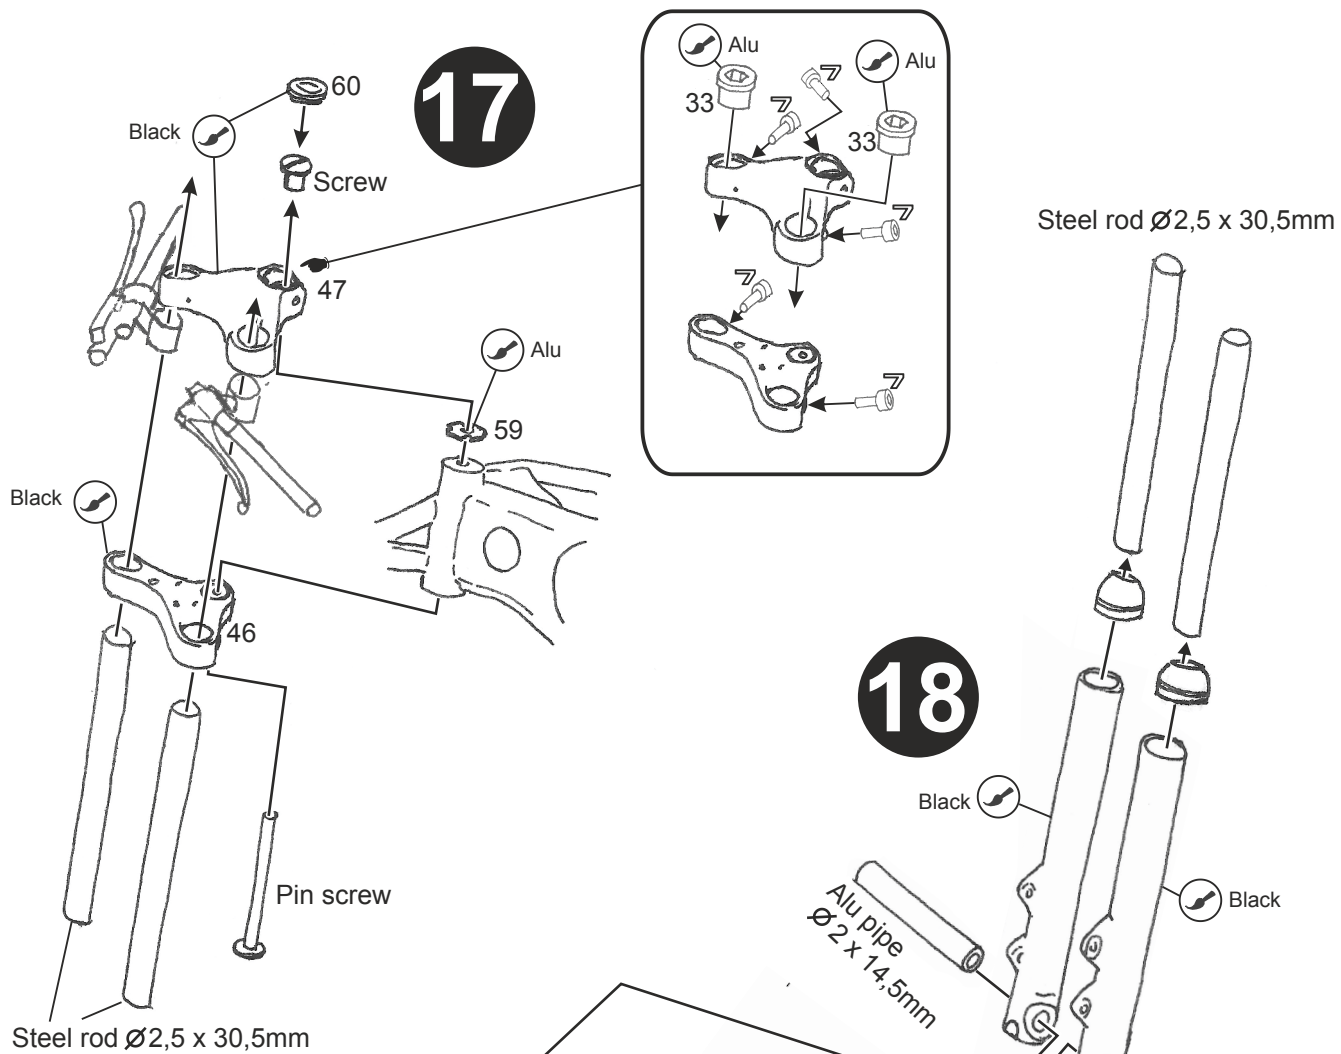

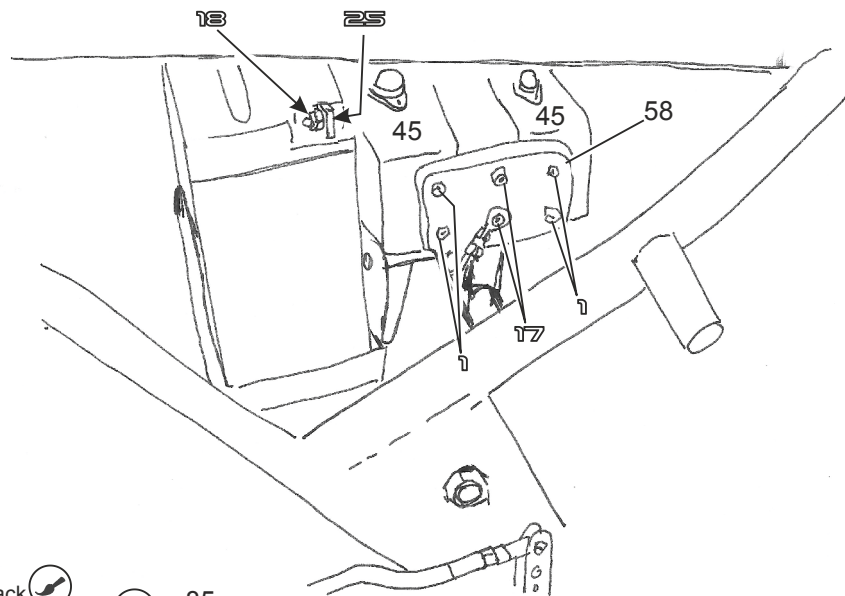

21

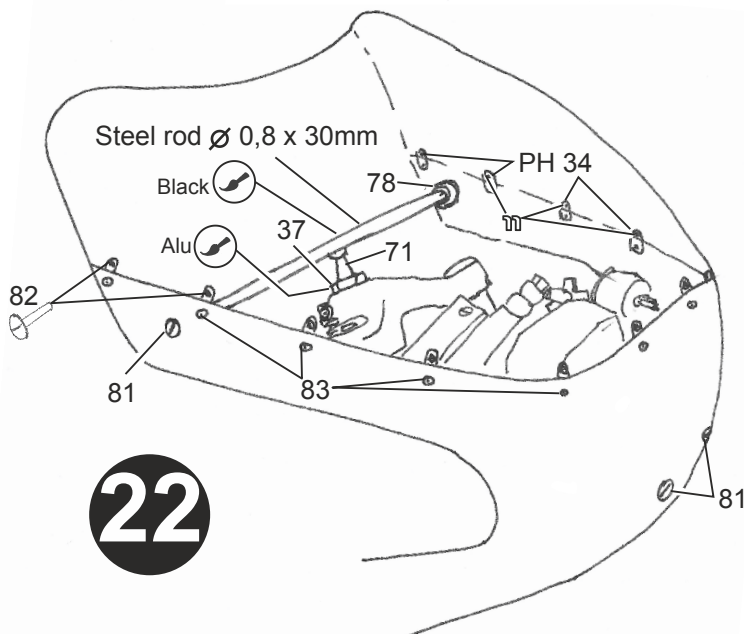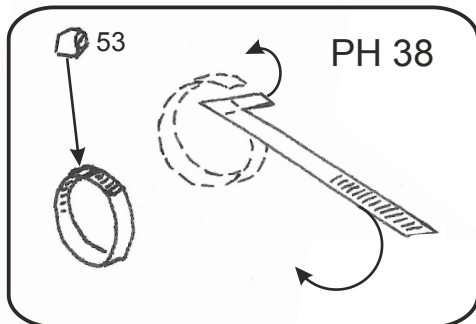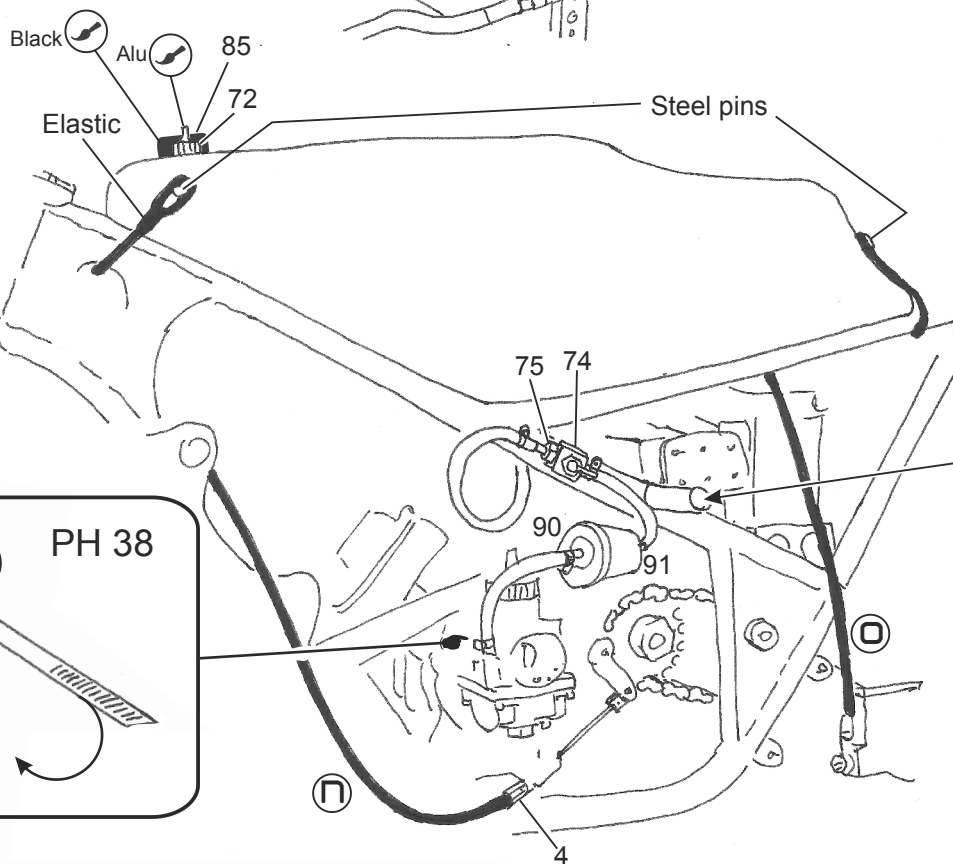

22

